

INSTALLATION FOR STL4 LED LINEAR STRIP 4 FT.

SAVE THESE INSTRUCTIONS - READ ALL INSTRUCTIONS CAREFULLY

⚠ WARNING




PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

- To prevent personal injury or product damage only licensed electricians/personnel should install fixture.
- Turn off the power supply at the fuse or circuit breaker box before you install the fixture.
- Turn off the power supply again when you perform other maintenance.
- Do not look directly at lighted lamp.
- Double-check all connections to be sure they are tight and correct.
- Wear rubber-soled shoes and work on a sturdy ladder.
- RISK OF CUTS - Some metal parts in the fixture may have sharp edges.
- To prevent cuts and scrapes, wear gloves when handling the parts.

CAUTION:

- For your safety, read and understand instructions completely before starting installation.
- To prevent wire damage, do not expose wires to edges of sheet metal or any other sharp object.
- Account for small parts and destroy packing material, as these may be hazardous to children.
- For indoor use.

WIRING DIAGRAM

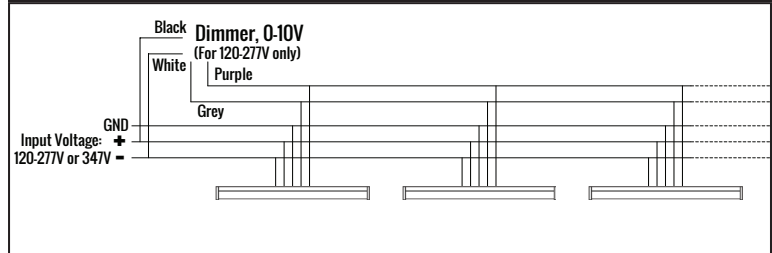


MOUNTING INSTALLATION INSTRUCTIONS - (SAVE INSTRUCTIONS FOR FUTURE REFERENCE).

INSTALLATION INSTRUCTION

1. Disconnect Power - Always disconnect power before installation and maintenance.
2. Remove wiring cover and one knockout from endcap or back of chassis.
3. Mount the chassis onto the surface and fix by screw.
4. Install strain relief coupling in the knockout, insert power supply wire through the strain relief and secure.
5. 18AWG Ground wire to Green Ground with wire nut: Insert the 18AWG black and white wire of the supply wire to the disconnecter with proper polarity.
6. Connect the dis-connector pair together.
7. Re-install the wiring cover.
8. Check Voltage.
9. Turn-on the fixture.

V HOOKS INSTALLATION

1. Attach support chain to "V" hook.
2. Attach the "V" hook at both ends of fixture.
3. Install the support chain to desired location.

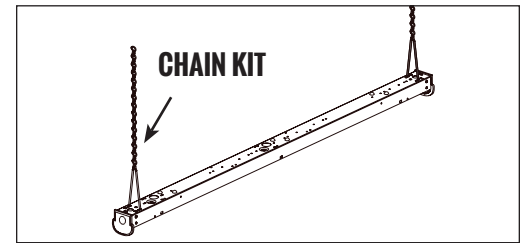

WIREGUARD INSTALLATION

1. Use a standard screwdriver to punch thru the wireguard mounting KO (Total 6pcs).

2. Align the mounting hole between two bottom wires of wireguard and then fix by screw.
3. Repeat for other mounting holes.

4. Complete.

